

# DENVER®

Instruction Manual

Bluetooth Speaker

BTL-65



[www.denver-electronics.com](http://www.denver-electronics.com)

Before operating this product, please read this instruction manual carefully and completely.

EN-1

## EN Instruction manual

### SAFETY

- Rechargeable battery is only to be charged under adult supervision.
- Only use the supplied USB cable to charge the battery. Improper charging may damage the battery and the device.
- Do not attempt to open the rechargeable battery or battery pack. There aren't serviceable parts inside.
- Should a battery leak, the device may become damaged. Clean the battery compartment immediately, avoiding touching your skin.
- Keep the battery out of reach from children. If swallowed, consult a physician immediately.
- Avoid storing the battery in extremely hot or cold environment. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- Do not dispose battery in a fire as it may explode. Battery may also explode if damaged. Please dispose it according to local regulation. Do not dispose it as household waste.

EN-2

### BEFORE THE FIRST USE

- Please charge the battery for at least 8 hours before your first use of device.
- If the device is not used for a long period of time, the battery may be out of power. Please charge the battery.
- Connect the supplied USB-cable to the speaker and an external power source. During charging the indicator will be red.

### PARTS DESCRIPTION

1. Disco light dome
2. LED-M key
3. Aux jack
4. DC jack
5. On/Off switch

### USE

#### 1 Bluetooth playback

- Turn on the device by using the ON/OFF switch.
- Turn on your Bluetooth device, search for the speaker and choose to pair. (If your Bluetooth device ask a password, please insert "0000".)
- Once paired successfully, both the speaker and your Bluetooth device will store the device.

#### Aux playback

- Connect your external device to the unit by using a standard 3,5mm line-in cable.
- The connection is made, you can start playback on your external device.

### CHARGING

- Charge the battery with the supplied USB cable. You can connect the cable to a computer or USB power supply. The charging indicator LED remains on while the battery is charging.
- The device will be fully charged in about four hours.
- When the battery is running low, the device will beep.

#### LED function

- Press and hold the LED--M key to turn the Disco light dome on or off.
- Press the LED-M key to switch between different disco light modes.

EN-3

### CLEANING AND MAINTENANCE

- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.

### GUARANTEE

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.
- For the detailed warranty conditions, please refer to our service website: [www.service.tristar.eu](http://www.service.tristar.eu)

### ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

EN-4

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type BTL-65 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.denver-electronics.com/denver-BTL-65/>  
Operating Frequency Range: 2.402-2.480GHz  
Max Output Power: 2.06dBm  
Radio Frequency: 87.5 – 108.5MHz

Imported by:  
DENVER ELECTRONICS A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark  
[www.facebook.com/denverelectronics](http://www.facebook.com/denverelectronics)

EN-5