



EC-53

www.facebook.com/denver.eu

02/2025



 
 
 
Safety information

1. Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.
2. This product is not a toy. Keep it out of reach of children.
3. Keep product out of the reach of children and pets to avoid chewing and swallowing.
4. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius.
5. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
6. Do not expose to heat, water, moisture, direct sunlight!
7. Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
8. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
9. Only charge with supplied USB cable.
10. Do not use non original accessories together with the product as this can make the product functionality abnormal.

1.Functions Description

a) Keys Function

- Ⓜ Mode Adjustment
- ⏮ Volume-/Time Setting decrease/Previous Song
- ⏻ Turn ON/OFF,Play/Pause Music,Handsfree Calling
- ⏭ Volume+/Time Setting increase/Next Song
- ⚙ Set or Cancel the Alarm

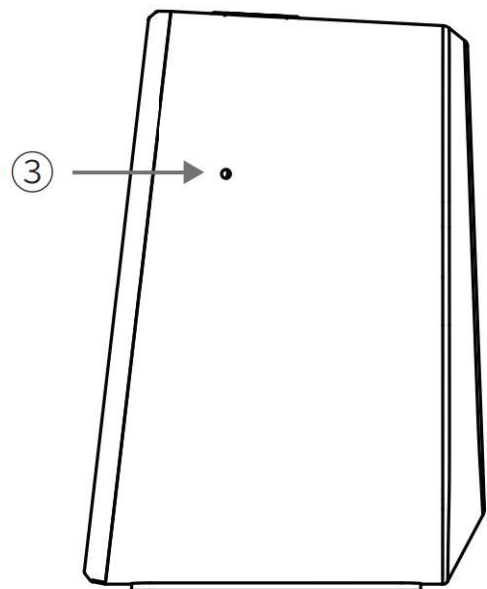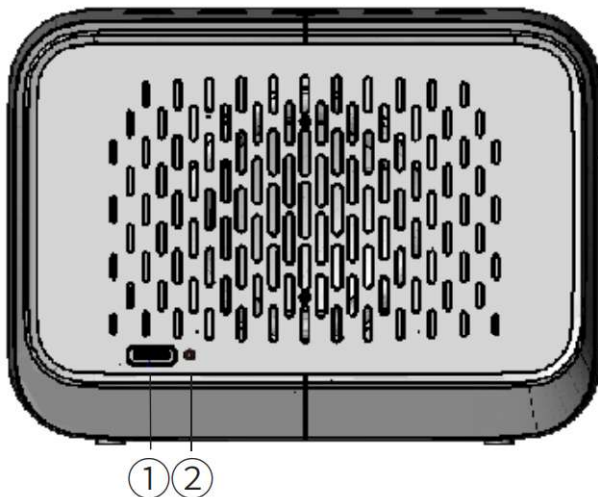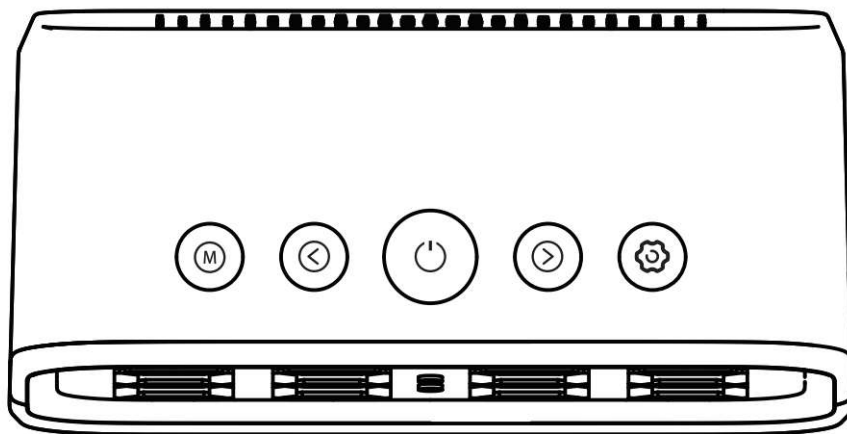

b)Functional Ports

- ① Charging port
- ② Charging indicator

TIP:Red light on when working

- ③ MIC: microphone

c)LED Display Area

④Time Display Area

 
⑤Morning

⑥Afternoon

⑦BT Mode Indicator: Bluetooth working

⑧Alarm 1 Indicator

⑨Alarm 2 Indicator

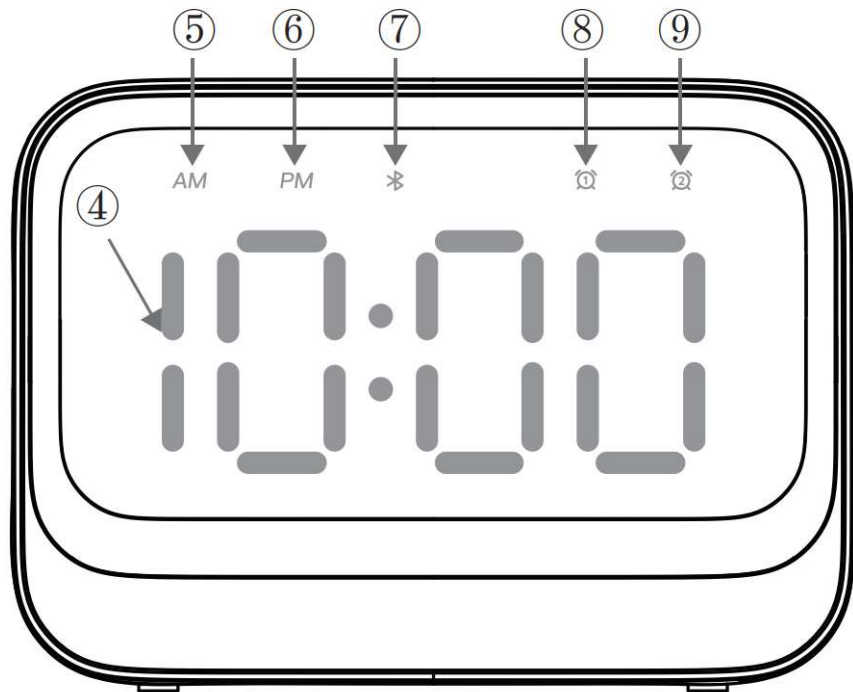

2.Device Operation

2.1 How to turn on/off the device?

Press  key for 2 seconds to turn on, press  key for 3 seconds to turn off.

2.2 How to set the time?

Connect the device to your cell phone with Bluetooth,the device will automatically synchronize your cell phone time and day,no need to set it separately.

※(Some phones will prompt for permission authorization, allowing authorization to achieve synchronization)

2.3 How to connect the power?

Connect the USB-A end of the cable to the power adapter and the Type-C end to the product, then the product can operate normally.

Warning!

Please use a power adapter that has been certified for safety and produced by a legitimate manufacturer. Do not use the power adapter in flammable materials or in humid or high-temperature environments.

2.4 How to set alarm 1, alarm 2 and manually?



The setup steps for the other modes are the same as for alarm 1 mode.

2.5 When the alarm is ringing, what button turns it off?

Each alarm with snooze function, get 5 minutes extra sleeptime per snooze, up to 3 snooze. When the alarm rings for the first time, press any key once to enter the snooze function, If you need to stop the alarm, please press  key 2 times to stop the alarm.

2.6 How to cancel the alarm that has been set?

Press the  key to switch alarm mode: Short press  to switch 4 clock modes:  /  /  / no alarm
Select no alarm mode( and  indicators are off).

2.7 Is it possible to change the alarm ringtone to another song and can the volume of the alarm be adjusted?

Bluetooth speaker and alarm clock are 2 separate systems, the volume control key can only control the volume of the Bluetooth speaker, the ringtone and volume of the alarm CANNOT be changed, the volume reaches 100-105 decibels, the device is a loud alarm clock for heavy sleepers

2.8 How to connect to cell phone Bluetooth?

Turn On the Clock, it will be automatically to  mode, when the device  indicator is ON, find "Denver EC-53" in your phone Bluetooth, connect to Denver EC-53

2.9 How to adjust the speaker volume, switch songs and pause play?

Short press   key to adjust the speaker volume, Long press   key to switch songs, press  key to pause/play.

2.10 How to set the Time Display Brightness ?

It will be brightest after power on, and will dim after 15 seconds of inactivity.

Specifications

Model:EC-53

Bluetooth Version:Bluetooth 5.3

Working Distance:10M(barrier free)

Output:3W

Operating Frequency: 2402-2480MHz

Power input:DC 5V1A

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type EC-53 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: EC-53. Now enter product page, and RED directive is found under downloads/other downloads.

Operating Frequency: 2402-2480MHz

Max Output Power:3W

DENVER A/S

Omega 5A, Soeflen

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu