

PocketBook

Color Note

User Manual

Table of Contents

SAFETY PRECAUTIONS.....	4
VISUAL APPEARANCE AND CONTROLS.....	8
TECHNICAL SPECIFICATIONS.....	9
GETTING STARTED	10
Charging the Battery	10
On/Off	11
Main menu overview	12
Gestures	15
Working with On-Screen Keyboard	16
Connecting to the Internet	18
Bluetooth pairing	19
USB data transfer/charging port	20
Audio support	21
Google Play Store registration	21
APPLICATIONS	23
Notes	24
Reader	24
Audio Player	24
Calculator	29
Files	29
Gallery	30
Browser	32

READING BOOKS.....	35
Navigation and page turning	35
Reading menu overview	36
Reading menu	37
Long tap menu	40
PocketBook Cloud	41
Sync process	43
SETTINGS	44
Wi-Fi	45
Bluetooth	45
Battery	45
Storage	45
Sound	45
Display	46
System	46
About	47
Play Store	47
FIRMWARE UPDATE	48
CUSTOMER SUPPORT	49
COMPLIANCE WITH INTERNATIONAL STANDARDS	50

Safety Precautions

Before you start working with the Device, please, read this section carefully. Following these instructions will help you ensure your safety and extend the service life of the Device.

Storage, Carriage and Usage Conditions

 
The Device's operating temperature range is 0 °C to 40 °C, so don't expose the Device to excessively high or low temperatures. Never leave cables near heat sources. Heated cables or their insulation may become deformed or damaged, which could lead to fire or electric shock.

Try to avoid the following:

Electrostatic charges



Excessive mechanical pressure

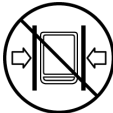

Strong electromagnetic fields



 
UV electromagnetic radiation



Liquids or damp



Direct sunlight

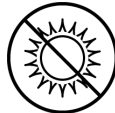

Direct flame or smoke



Maintenance

⊗ Do not leave the Device for extended periods in poorly ventilated environment, e.g. in a car or in closed boxes/ packaging.

⊗ Do not drop or try to bend the Device.

⊗ Do not disassemble or modify the Device.

⊗ Do not use the Device with a damaged battery or charger (broken case, poor contact, broken feed cable). If the battery is damaged (cracked case, leakage of electrolyte, deformed etc.) it should be replaced by the authorized personnel. Usage of home-made or modified batteries may cause an explosion and/or damage the Device.

⊙ Protect the screen from objects that may scratch or damage it. To ensure adequate protection of the screen, we recommend storing the Device in a protective and/or hard cover.

⊗ Do not use organic or inorganic solvents (e.g. benzoyl etc.) to clean the screen/case.

⊙ Keep away from children.

⊙ Use a soft cloth to remove dust from the Device's surface. Apply a few drops of distilled water to remove dirt.

Up to five faulty pixels are acceptable in the screen and do not constitute a warrantable defect of the screen.

If the device has not been used for a long time, the battery charge indicator may not work when the charger is connected.

In this case, connect the charger, let the device charge for 1 hour, then disconnect and reconnect the charging device or USB cable. The device can then be used as normal.

By the end of the product guarantee term, please contact the nearest authorized service facility an examination concerning security maintenance..

For detailed information about service centres in your region please visit the official website: <http://www.pocketbook.ch>.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Warning! The screen of the device is easily damaged! To avoid damage, make sure not to drop, bend, or apply pressure to the device, do not allow point pressure on the screen surface and any other actions that might break or damage the screen. Moreover, the screen does not have any special protective layer so please avoid any contact between its surface and objects that might leave marks or scratches on it. To decrease the risk of damaging the device and its screen it is recommended to keep and transport it in a PocketBook protection cover.

RF Safety

The Device receives and transmits radio frequencies and may interfere with radio communications and other electronic equipment. If you use personal medical Devices (e.g. a pacemaker or hearing aid) please contact your doctor or the manufacturer to learn whether or not such medical devices are protected against external RF signals.

 
Do not use wireless communication in places where it is prohibited, e.g. onboard a plane and in hospitals — this may affect airborne avionics or medical equipment.



Utilization

Incorrect disposal of this Device may have adverse impacts on the environment and public health. To  prevent such consequences, follow the device-specific disposal requirements. Recycling of these materials helps preserve natural resources. For more information regarding recycling issues please contact local municipal authorities, your domestic waste collection service, the store where you purchased the Device, or the authorized service center.

Visual appearance and controls

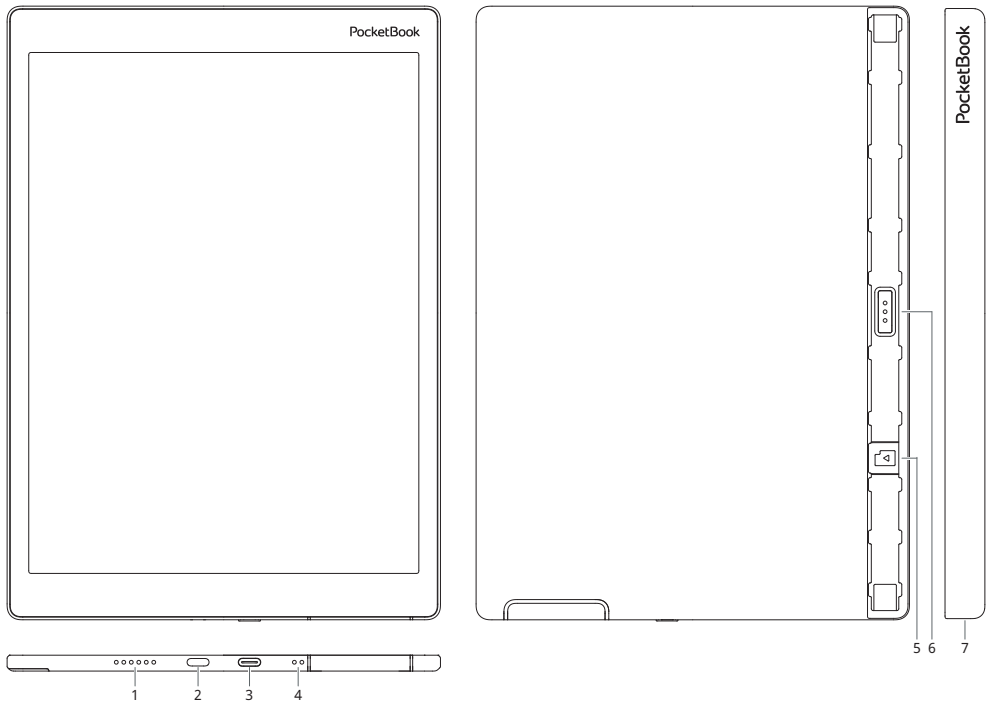

1. **Speaker.**
2. **USB Type C slot** – connect the Device to a PC or charge using a USB-cable.
3. **Power button** – turning the Device On/Off.
4. **Microphone.**
5. **microSD slot** – supports up to 256 GB microSD card.
6. **Smart accessories connector.**
7. **Decorative lid.**

Technical Specifications

Display	10.3 inch (26.12 cm) E Ink Kaleido™ 3, 1404 × 1872 (227DPI), RGB: 468 x 624, (76DPI)
Frontlight	SMARTlight + E Ink ComfortGaze™
Touch screen	Capacitive (multisensor)
Digitizer	Wacom Stylus support
Processor	Quad Core (4×1.6 GHz)
RAM	4 GB
Storage	32 GB *
Operating system	Android 12
Communications	Wi-Fi (2.4/5GHz), Bluetooth v.5.2, USB 2.0 (Type C), OTG
Speakers	Yes (mono 0.8 W)
Microphone	Yes (mono)
Battery	Li-Ion Pol, 4000 mAh **
G-sensor	Yes
Protective cover sensor	Yes
Book formats	ACSM, AZW, AZW3, CBR, CBZ, DJVU, DOCX, EPUB, FB2, FB2. ZIP, HTM, HTML, MOBI, PDF, PRC, RTF, TXT
Image formats	JPEG, BMP, PNG
Audio format	MP3, MP3.zip, OGG, OGG.zip
Audio book format	M4A, M4B, OGG, OGG.ZIP, MP3, MP3.ZIP
Dimensions	246 × 173.5 × 6.4 mm
Weight	390 g

* The actual available internal storage size may vary depending on the software configuration of your device.

 
** Up to one month of battery life (may vary depending on usage mode, connectivity and settings).

Getting Started

Thank you for purchasing the PocketBook Color Note! A few operations are required to get started. The schematic diagrams are only for reference, subject to the actual product!

CHARGING THE BATTERY

You can charge the battery from **(1)** a PC using a USB-cable or from **(2)** the power line using a charger (optional).

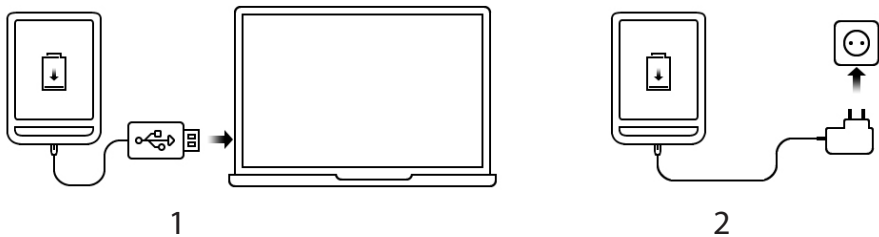

To charge the battery for the first time, do the following:

- Connect the Device to a computer or charger with a USB-cable. The device will turn on as soon as charging starts.
- When the battery is fully charged, you can disconnect the cable from the Device, which is ready for usage.

ON/OFF

Turning ON: Press and hold the Power button for 2 seconds to start the device.

Turning OFF: Press and hold the Power button for 2 seconds, wait for the screen to display the Off/Restart dialog box, then select to press the [Off] button to turn off the device.

Restarting: Press and hold the Power button for 2 seconds, wait for the screen to display the Off/Restart dialog box, then select to press the [Restart] button to restart the device.

Sleep/Wake up: Automatic sleep is supported, with the option to set your own sleep time.

NOTE: Press and hold the Power button for 5 seconds to force off the power. It can automatically turn on when charging in the off state. Press and hold the Power button for 16 seconds to force reset and turn on in an emergency.

MAIN MENU OVERVIEW

17 Jul, 10:41

63%

Recent Notes

New note
create

Study
Today

Handwriting
Today

Text
Today

Planner
Today

Recent Books

Notes

PocketBook

Applications

Audio Player

Settings

Top menu panel

Recent Notes - list of recently edited notes

Recent Books - list of newly added books

Applications Quick Access menu

The image is a screenshot of a mobile application's main menu. At the top, there is a status bar showing the date and time '17 Jul, 10:41' on the left and the battery level '63%' on the right. Below the status bar, the main menu is organized into several sections. The 'Recent Notes' section is at the top left, featuring a 'New note create' button with a plus icon, and three note cards: 'Study Today' (a triangle diagram with angles and the formula $BC = 2y \times \sin(\frac{\theta}{2})$), 'Handwriting Today' (a card with handwritten text and a 'Handwriting tool' label), and 'Text Today' (a card with a paragraph about text notes). To the right of 'Recent Notes' is a 'Planner Today' card with a checklist of tasks. A 'View all' link is positioned above the 'Text Today' card. Below 'Recent Notes' is the 'Recent Books' section, which displays five book covers: 'The Adventures of Tom Sawyer', 'Alice's Adventures in Wonderland', 'Pride and Prejudice', 'In Freedom's Cause', and 'Sherlock Holmes'. A 'View all' link is located above the 'Sherlock Holmes' book cover. At the bottom of the screen is a navigation bar with five icons: a pencil for 'Notes', a bookshelf for 'PocketBook', a grid of squares for 'Applications', a speaker for 'Audio Player', and a gear for 'Settings'. Arrows from the text labels on the right point to these specific elements in the screenshot.

Top menu panel

Recent Notes - list of recently edited notes

Recent Books - list of newly added books

Applications Quick Access menu

Navigation buttons

🏠 **Home button** – instantly returns you to the Main Menu from any part of the device's Firmware.

↶ **Back button** – cancelling latest action and returns back for one step.

 
📄 **Task manager button** – allows you to observe and control recently launched applications.




Navigation buttons appearance

Notification panel


Touch or slide down the ∨ button to open a *Notification panel*.

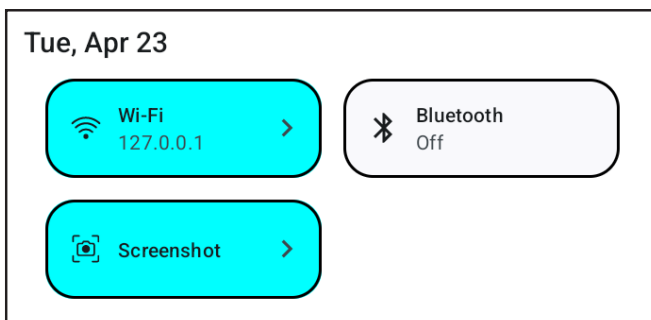

 
- **Wi-Fi network button** – allows Wi-Fi connection to be turned ON and OFF. Longtap opens the settings.
- **Bluetooth button** – allows Bluetooth connection to be turned ON and OFF. Longtap opens the settings.
- **Screenshots** – allows to make instant screenshots and to save them in the Device's internal memory.

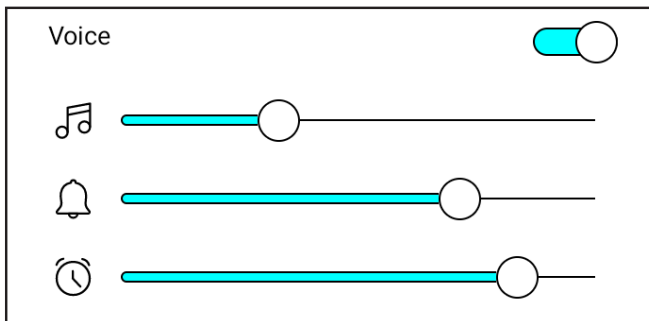

 - **Voice** – allows to turn ON/OFF and adjust volume. You can adjust media volume, notifications volume, alarm volume.

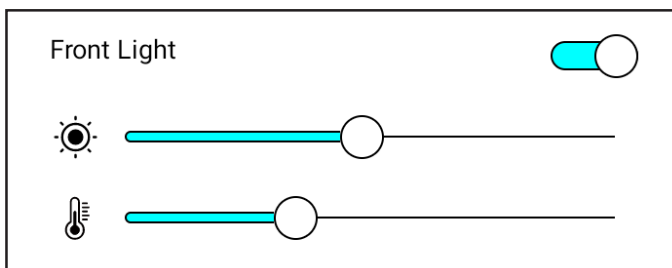


 - **Frontlight button** – allows frontlight to be turned ON and OFF. **Frontlight brightness slider** controls screen brightness level. **Frontlight color temperature slider** controls screen color temperature.

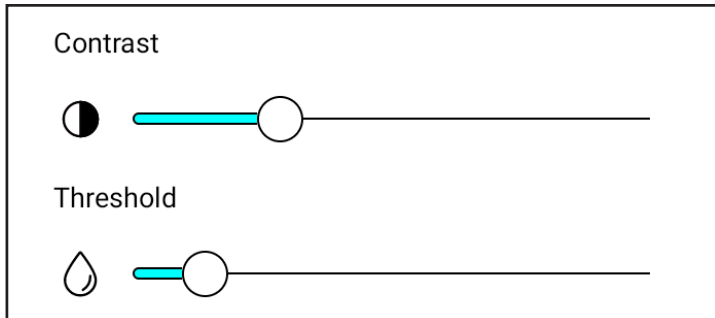

- **Contrast** and **Threshold** – adjusts contrast and threshold respectively.

 Also the **notification panel** allows you to restart or turn off your device, or open Settings.

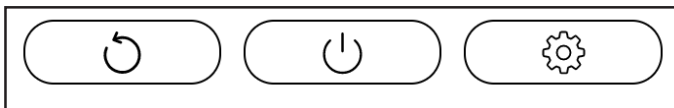

GESTURES

CAUTION! The Device’s touch screen is sensitive and fragile. To avoid its damage, please, touch it carefully while controlling the Device with gestures.

Tap

Opens an element (book, file, folder, application or menu item).



Touch & hold

Opens the context menu of an element (if available).



Slide

Turns the pages of a book or a list; moves an image: slide your finger across the screen.



Flick

Scrolls lists: move your finger across the screen rapidly.



Scaling

Changes the image scale: place two fingers on the screen and pinch them together to zoom out or spread them apart to zoom in.



WORKING WITH ON-SCREEN KEYBOARD

 
The on-screen keyboard is used when it's necessary to enter text information, for example, for a search or network connection credentials.

To type a character, tap a dedicated button. To type a special character, long press a dedicated button. Select the requisite special character in the drop-down list.

To switch from an alphabetical to a numerical keyboard, tap . To switch from a numerical to an alphabetical keyboard, tap .

To add a new keyboard language, go to *Settings > System > Language and input* and choose *Languages*.

To switch to a different keyboard language, tap . The selected language is displayed on the spacebar.

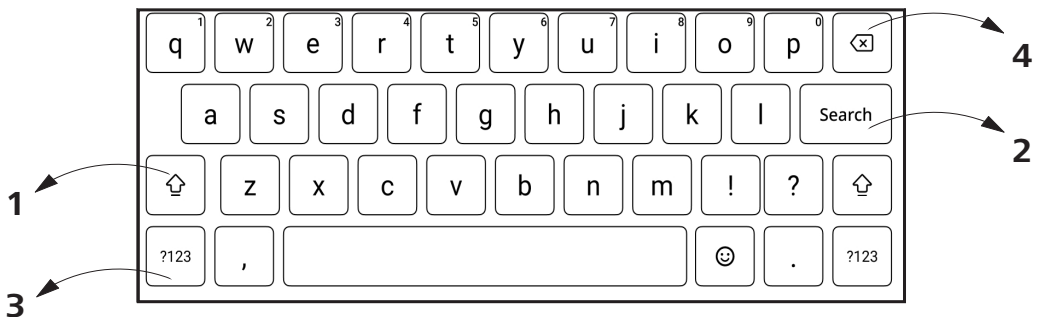

1. Change case;
2. Enter the typed text;
3. Switching keyboard modes;
4. Erase last typed symbol.

CONNECTING TO THE INTERNET

The Device can be connected to the Internet using Wi-Fi networks. A Wi-Fi connection can be *enabled/disabled* by clicking the icon  on the notification panel. If a known network is available, the connection is established automatically. If a known network is not available, the list of available wireless connections opens. If the network to which you want to connect is secured, enter the network password using the on-screen keyboard.

Advanced Settings

If it is necessary to get information about a known network or to configure network settings manually, long tap on the icon  on the notification panel or select *Settings > Wi-Fi*. The list of available networks will be opened.

A long press on the network name will open a window with information about the network.

Adding a network

To add a network:

1. Select *Settings > Wi-Fi*.
2. Tap the *Add Network* button and enter its SSID from the on-screen keyboard in the *Network name* field.

3. Select the security type in the corresponding list:
 - *None* – for an open network;
 - *WEP* – after you select this option, you will need to specify the *WEP Authentication type* – *Open System* or *Shared Key* either.
 - *WPA/WPA2-Personal* – you will need to enter a network key (up to 64 symbols).
4. If necessary, you can change the *Proxy* and *IP settings* in the *Advanced options* section.

BLUETOOTH PAIRING

This type of connection allows you to connect wireless Bluetooth devices (such as headsets, speakers, and car audio systems) to play audio files.

To pair your Bluetooth device with your e-book take the following steps:

1. Go to *Settings > Bluetooth > Pair new device*.
2. The system will automatically display a list of devices available for pairing.
3. Find the name of the Bluetooth device to connect to and click on it.

The next time you turn on the device, the connection will be established automatically.

ATTENTION! When connecting for the first time:

- activate Bluetooth on the notification panel of your Device;
- switch your Bluetooth device to pairing mode;
- when connecting for the first time, your Bluetooth device may request permission to pair. Please confirm this action.

USB DATA TRANSFER/CHARGING PORT

Charging/data transfer: The Type-C USB data cable is supported to connect to the computer for charging/file transfer. The user who uses a power adapter for charging must purchase a power adapter that has received CCC certification and meets the requirements of the standard.

Please connect the 5V-3A; 9V-2A; 12V-1.5A power adapter to an AC outlet for charging via the data cable [recommended].

CHARGING TIPS: During charging, the indicator lights up to indicate that it is charging, and goes out when charged. If the indicator does not light up, it indicates that it is fully charged, otherwise, please check whether the Type-C USB cable is properly inserted.

AUDIO SUPPORT

Wired Headphones with a Type-C port is supported, with built-in dual-channel speakers. Wireless headphones can be connected via the Bluetooth 5.2 built-in module.

EXCEPTIONS: If there is no sound, please tap the status bar and check if the volume is too low or the mute mode is turned on in the [Sound] bar.

GOOGLE PLAY STORE REGISTRATION

Follow these easy steps to start using the Play Store on your PocketBook Color Note device:

1. Open *Settings* and select the *Play Store section*. Enable *Google Play Service* by switching on this option. After that, click on the “*Google Play Store*” button. A hint popup will appear, inviting you to sign in to your Google account. Click “*Sign in*”, and the Google Play authorization window will appear.

2. Click on the “*Sign in*” button. Google will check the information about this device, which can take several minutes. When the check is finished, the sign-in process will start.

3. Enter your Google Account login information. Choose whether you need backups from this device to Google Drive and click the “*Accept*” button. As a result, the Play Store window will appear.

4. Click the “*Back*” button on the dock panel at the bottom of the screen to return to *Settings*. Choose the *Play Store section* again and click on the “*Copy and go to register*” button. It will copy your *device identification number* (Device ID) to the clipboard.

5. Sign in again using your Google Account. As a result, you will be redirected to a device registration window.

6. Paste the previously copied *Device ID* from the clipboard into the “*Google Services Framework Android ID*” field, solve the captcha if needed, and click the “*Register*” button. Your device ID will appear under the “*Register*” button.

7. Restart your device to complete the registration process. You will now find the *Play Store icon* in the list of applications. Clicking on this icon will launch the *Play Store*, allowing you to install any necessary applications.

 
Please note that PocketBook cannot guarantee the proper functioning of all applications installed from the Google Play Store on this device due to the specific characteristics of the E Ink screen.

Applications

In this section, you can review the applications installed on your device.

The default home screen contains four applications:

- *Notes;*
- *Reader;*
- *Audio Player;*
- *Settings.*

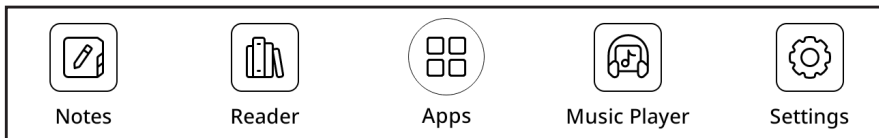

Other apps are available in the application menu. To open the application menu, click on the icon .

To move, replace, or delete apps in the Main menu, use the context menu by long tapping on the app icon.

Notes

The *Notes application* shows a list of notes. The application can also be used to export selected notes.

To create a new note, click the [Note] button on the top panel of the screen. In the window that opens, select the type of note you want to create, then click [Confirm].

More detailed information can be found in the user guide for the note application.

Reader

 
This environment helps you to organize all of your eBook files in collections, to read books, as well as to buy books in the store.

When there are too many books on more than one page, tap the page number for quick skips. When there are too many books in the bookshelf, the books can be searched by [Search]. Folders can be used to manage books in the bookshelf.

Audio Player

Audio Player allows you to play MP3, OGG media files.

The application also automatically groups tracks by genre, authors and albums depending on the information from the track description.

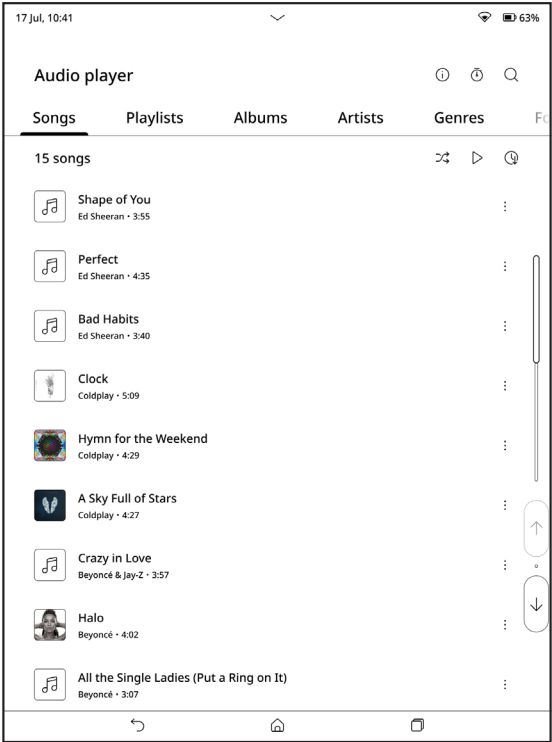


Audio player appearance

The *Songs* tab displays all audio files available on the device.

Click on the  icon will open a context menu with the following options available:

 - *Play* - play the selected track;
- *Add to queue* - add the selected track to the queue;
- *Add to playlist* - add the selected track to the playlist;
- *Audiofile info* - shows file info;
- *Select* - to select one or several files;
- *Delete* - deletes track.

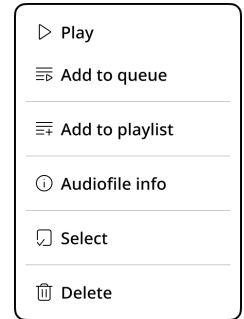


The *Playlists* tab contains all playlists with audio files.

To create a new playlist, go to the Playlists tab, and if you don't have any playlists yet, click the [+ Create playlist] button. If you have already created playlists, click on the + icon in the upper right corner. In the window that opens, enter the name of the new playlist using the on-screen keyboard and click OK.

A dialog box titled 'New Playlist' with a light gray background and rounded corners. Inside, there is a label 'Playlist title' above a text input field. The input field contains the text 'Chill Vibes' and has a small 'x' icon in its top right corner. Below the input field are two buttons: 'Cancel' on the left and 'OK' on the right.

Click on the  icon will open a context menu that allows you to:

 - *Shuffle* - start playback of the playlist from a random track, the rest of the tracks in the playlist will be played in random order;

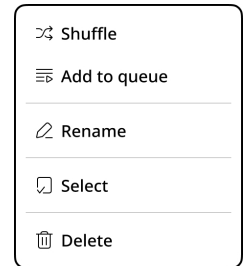

- *Add to queue* - add playlist to the queue;
- *Rename* - rename the selected playlist;
- *Select* - to select one or several playlists;
- *Delete* - to delete the selected playlist.

 
The *Albums* tab contains all albums with audio files.

The  button allows you to sort albums by album name or author name.

Context menu, which will be opened by clicking on the  icon allows you:

- *Shuffle* - start playback from a random track, the rest of the tracks in the album will be played in random order;

- *Add to queue* - add all album tracks to the queue;

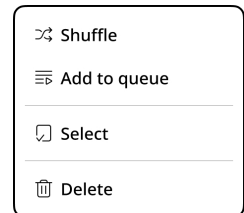


- *Select* - to select one or several albums;
- *Delete* - to delete the selected album.

To play an album, open it and click on the  button in the upper right corner. The  button allows you to play tracks in the album in random order.

The *Artists* tab contains tracks grouped by authors depending on the information from the track description.

 The  button allows you to sort artists by the name or by the number of tracks.

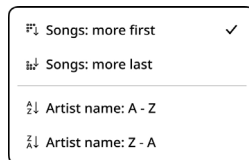


Click on the  icon will open a context menu that allows you to:

- *Shuffle* - to play tracks in random order;
- *Add to queue* - to add all tracks to the queue;
- *Select* - to select one or more artists;
- *Delete* - to delete the selected artist.

The *Genres* tab contains tracks grouped by genres depending on the information from the track description.

 
The *control panel* in playback mode shows progress bar of the track being played and allows you to shuffle tracks, play a track or the entire track list in repeat mode, change the playback speed, add track to queue, change the volume.

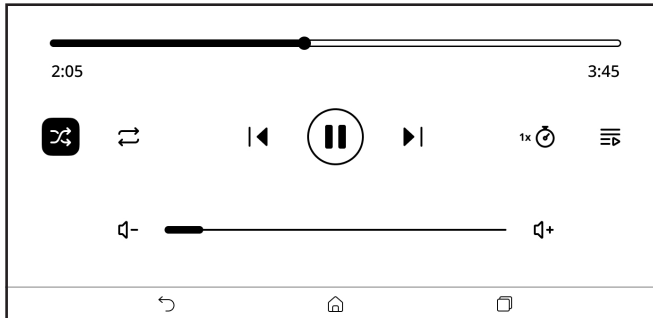

Control panel in playback mode

Context menu in the playback mode, which you can open by clicking on the  icon allows you:

 - *Add to playlist* - add the selected track to the playlist;
- *Audiofile info* - shows file info;
- *Select* - selects one or several files;
- *Delete* - deletes track.

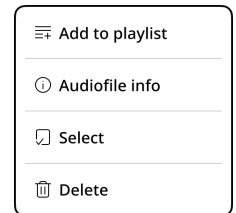

Calculator

The engineering calculator supports a wide range of mathematical operations, such as different numeric systems, trigonometric, logarithm, power and logical operations.

Files

This environment allows you to browse and manage all files loaded on to your device's internal memory. You can search

files, create new folders, select multiple files, import and change the view.

NOTE: Press on the „**More**“ icon in this environment to get access to the following hidden control elements:

- **Cut** – cut your files and folders.
- **Copy** – copy your files and folders.
- **Delete** – delete files and folders.
- **Rename** – rename your files and folders.

 
Gallery

The Gallery application allows you to view screenshots, photos and pictures uploaded to your device.

To create a new album, go to *Gallery > Albums* and select *Create new album*, enter a name of the album using the on-screen keyboard, and press *Confirm*, select images, and then tap *Add to album*.

Sort images by date

Sort images by recent

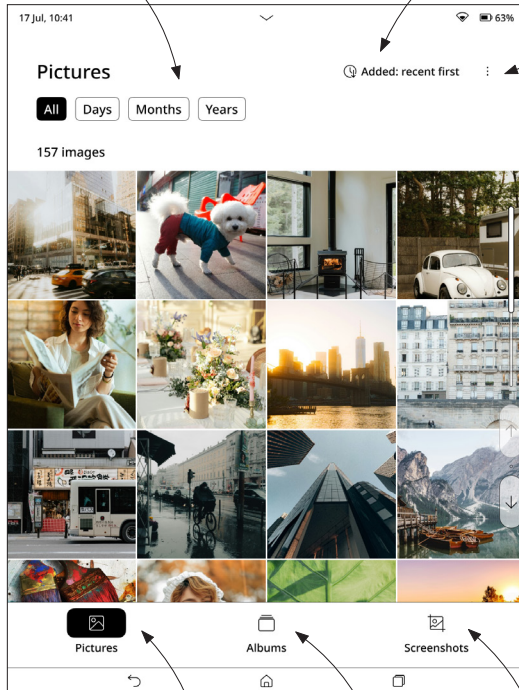


Open Context Menu

Open Pictures

Open Albums

Open Screenshots


To add new pictures to an existing album, open the album, click the icon **+** , select the pictures, and click *Add to album* or use a long-touch gesture on a picture, then click on the **⋮** icon to open the context menu and select *Add to album*. You can also use this menu to select all images or create duplicate images.

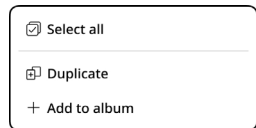

Tap on an image to open it in viewing mode. To open the image in the full-screen mode, tap in the center of the image in viewing mode. To exit full-screen mode, use the  icon at the bottom of the screen.

Click on the  icon in viewing mode will open a context menu with the following options available:

 - *Edit Image* - to edit images using the editing tools;

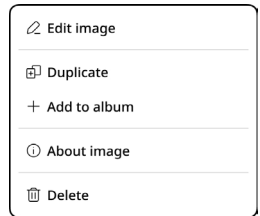


- *Duplicate* - to create a duplicate of the image;
- *Add to album* - to add an image to the selected album;

- *About image* - to view information about the image;
- *Delete* - delete the selected image.

To delete an image, select it and click the  icon, or in the viewing mode open the context menu and select *Delete > Move to recycle bin*. To restore an image, go to the gallery, open the context menu by clicking the  icon, select *Recycle bin*, choose the image you want to restore and click *Recovery*.

Browser

 This is an application for viewing web-pages. As you start the Browser, you are asked to connect to one of the available wireless networks.

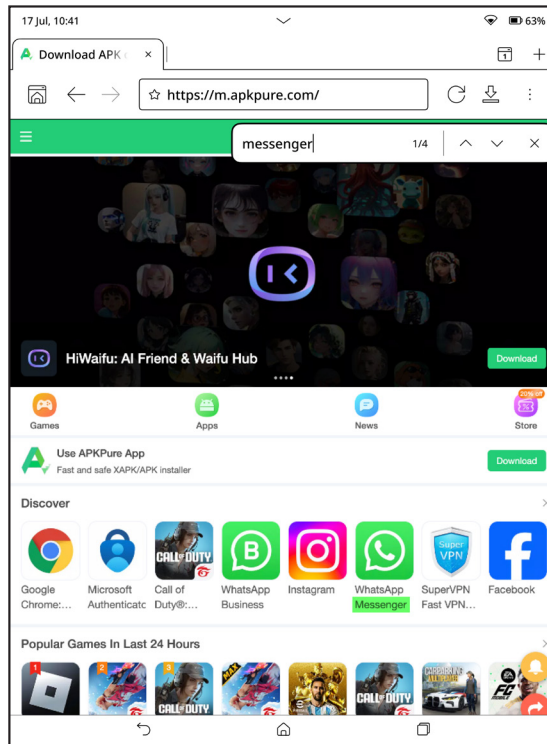

Browser appearance

To enter a website address, touch the address bar, type an address from the on-screen keyboard that appears, and press *Enter*. To follow a link, simply touch it. If a web-page doesn't fit a screen, you can scroll it: place your finger on the screen and move a page. You can also change the scale of a web-page by using zooming gestures (pinch or spread two fingers).

From the browser menu you can view the history of visited websites, downloads, favorites, adjust the scale of displaying web-pages and configure the browser from the *Settings* section. Under *Settings* you can clear history and cookies, disable/enable JavaScript and loading images.

Reading Books

In this section you will learn how to read e-books and configure reader software for the best reading experience.

 
The Device supports the following book formats: ACSM, AZW, AZW3, CBR, CBZ, DJVU, DOCX, EPUB, FB2, FB2.ZIP, HTM, HTML, MOBI, PDF, PRC, RTF, TXT.

To open an e-book, touch its icon on the *Home screen* or *Reader* section. If you have opened the book before, it will be opened at the page you've finished reading.

Navigation and page turning


To turn the pages of an e-book you can use any of the following methods:

1. **Swipe Left/Right** gestures with your fingers.
2. **Tap Left/Right** part of the screen

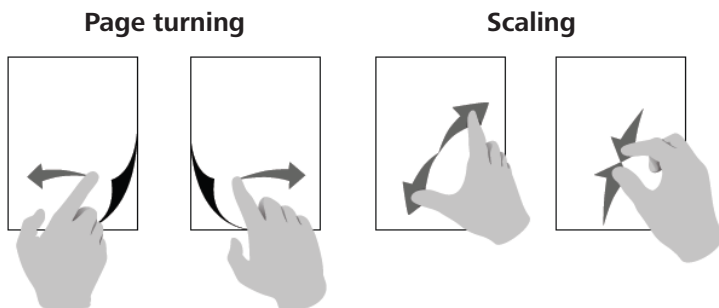


To bring up the reading menu, touch the center of the screen. The Device's screen also supports **Pinch to Zoom In / Out** and **Long Tap** gestures.

 Reading menu overview

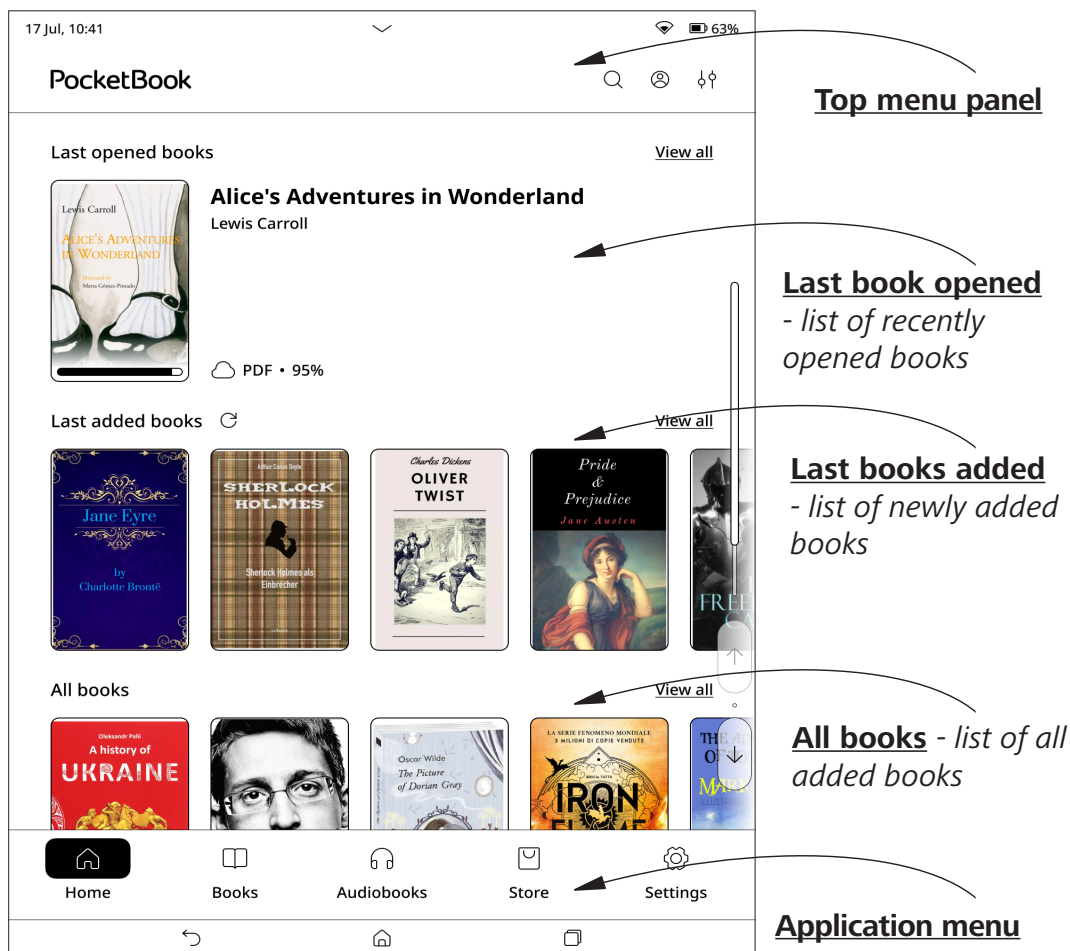

Reading menu

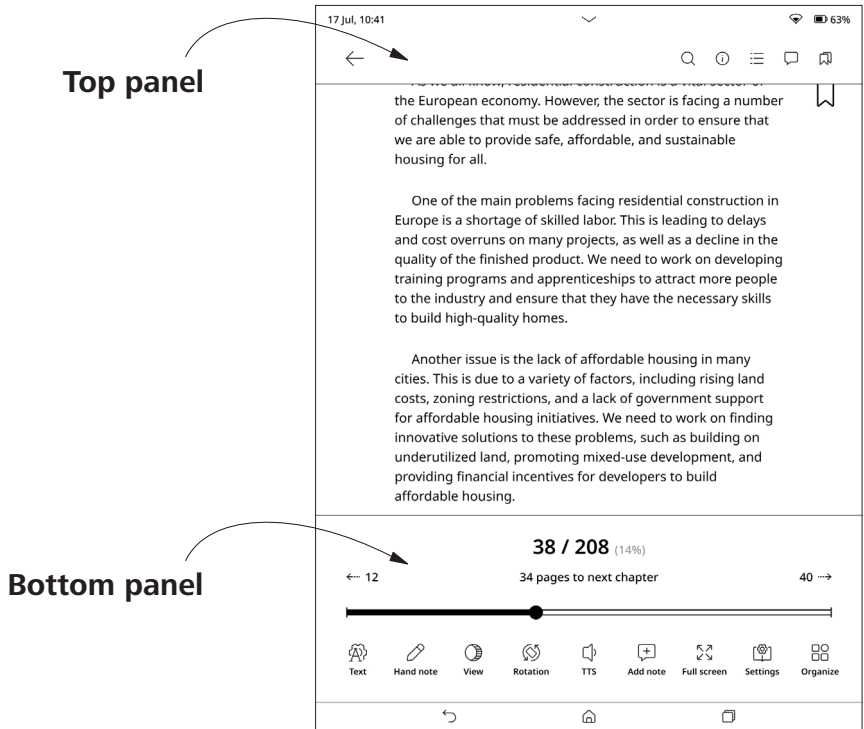

The Top Panel consists of the following icons and elements:
🔖 **Add/Remove bookmarks.** Allows to create or remove bookmarks on certain pages.

🔍 **Search/Find.** Tap on the upper right corner to find the corresponding keywords in the book.

☰ **Content.** Reveals the content of the e-Book as well as Bookmarks, Highlights&Notes and Handwritten notes.

← **Return** allows you to exit the book.

Bottom Panel consists of the following icons and elements:
Paging slider. Allows you to quickly move to the certain page of the book.



Aa Text settings. In this menu you can choose the settings for an opened e-Book file. Amount of settings and their type is different for different e-Book formats:



- For AZW, AZW3, DOCX, EPUB, FB2, FB2.ZIP, HTM, HTML, MOBI, PRC, RTF, TXT formats you can choose **Font Family, Font Size, Leading, Alignment, on/off Hyphenations, on/off Ignoring document style.**



- For a PDF format in the **Show** tab you can find **Text Re-flow, Margins cropping.**

 **View.** In this menu you can choose view options such as **Reading mode (Single page mode, Book mode** - displays 2 pages in album orientation), **Zoom**, enabling or disabling **Night Light** and **Showing reading progress.**

 **Rotation.** You can lock or unlock the chosen screen orientation for reading.

 **Text-to-Speech.** Enables the Text-to-Speech function (not supported in PDF format).

 
 **Add note.** Allows you to add a note. You can also use the long tap gesture on a word.

 **Settings.** Here you can set the global reading settings for chosen book.

 **Organize.** Allows you to organize the bottom panel.

Long tap menu

Tap and hold your finger on any word or phrase while reading the book to call for the long tap menu.

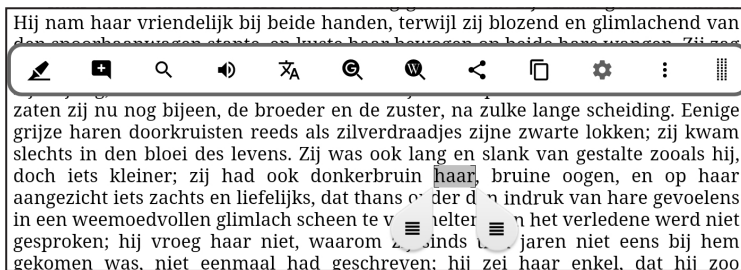

Tap **Highlight** – to highlight any selected word or phrase.

Tap **Bookmark** – to type your bookmark or note with the virtual keyboard.

Tap **Search** – to find the corresponding keyword in the book.

Tap **Text-to-Speech** – to hear the pronunciation of a chosen word.

Tap **Translate** – to translate any selected word with the built-in Dictionary.

Tap **Google Search** – to open Google page related to the selected word.

Tap **Wikipedia Search** – to open a Wikipedia page related to the selected word.

Tap **Share** – to share the chosen word or phrase.

 
Tap **Copy** – to copy the chosen word or phrase.

Tap **Settings** – to open global settings and set the highlight settings.

Tap **More** – to expand the context menu.

PocketBook Cloud

After logging into your PocketBook Cloud account, you will get access to your previously downloaded books, favorites, collections, and saved reading processes.

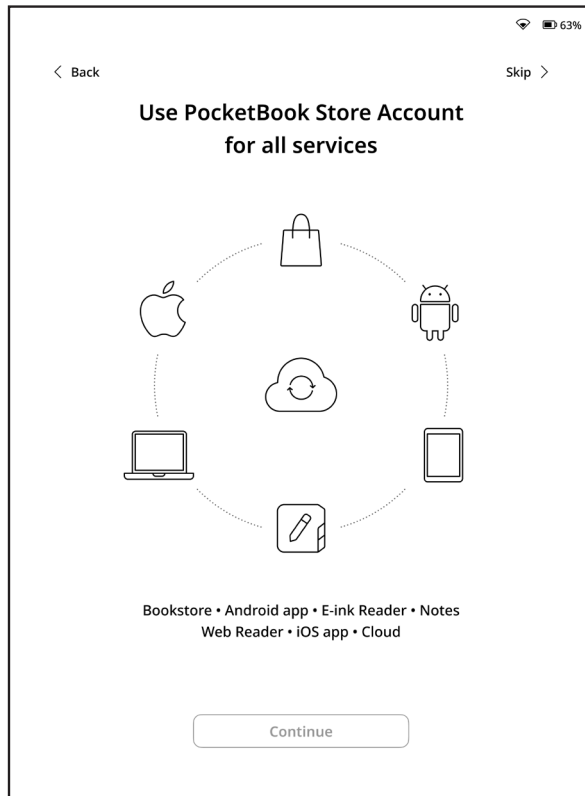

To sign in:

1. Tap the  icon.
2. You will be redirected to the login form, where you can sign in using your PocketBook Store account or you can create the account.
3. To continue, choose one of the suggested bookstores by tapping on its name and follow the instructions to create a new account.

4. You can automatically log in to your account by using QR scanner in PocketBook Reader application on your smartphone. To do this, choose *Scan QR code*. Open PocketBook Reader application on your smartphone, tap the  icon and choose *Scan QR code*.

Sync process

Your book list and reading position automatically sync when you:

- *log into your PocketBook Cloud account,*
- *open a book,*
- *close a book,*
- *add to a Collection / remove from a Collection,*
- *add to Favorites / remove from Favorites.*

 
If your Device isn't connected to the Internet, you will only have access to the books which are already on your Device. Once the device is connected to the Internet all your books will be synced.

If an error occurred during synchronization, please check your Internet connection. If your Internet connection is working, try to sync your books later.

Settings

In this chapter you will learn how to configure the Device’s interface and software features for the most convenient usage.

Select *Settings* at *Notification panel* or go to *Apps > Settings* to configure the Device. All changes will be applied after exiting the section.

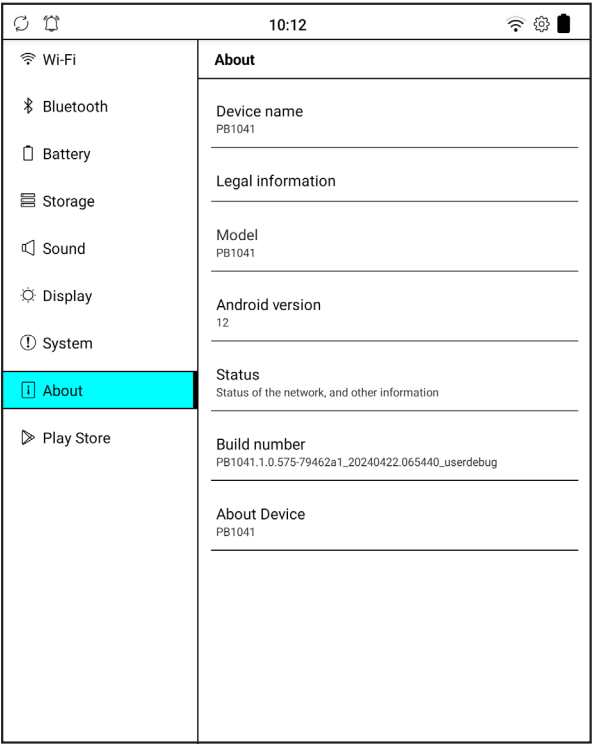

Settings appearance

Wi-Fi

In this section you can see the list of available networks and set the parameters needed for a network connection.

Choose the network and you'll see the parameters of this connection: Network name (SSID), signal strength, security, IP-address, network mask, main gateway, DNS.

Bluetooth

Tap the [Bluetooth] to enter the Bluetooth settings page, turn on the [Bluetooth connection switch] to search for a Bluetooth signal nearby that can be connected, such as Bluetooth speakers / headphones. Tap search to display.

Battery

Shows battery percentage, battery usage information and charging information. You can also enable and disable *Showing battery percentage in status bar*.

Storage

Shows storage usage information.

Sound

Allows you to adjust the sound volume.

Three options are available for customization:

- *Media volume;*
- *Ring and notification volume;*
- *Alarm volume.*

You can also turn on/off *Screen locking sound, Charging sound and vibration, Touch sound.*

Display

In this section you can turn on/off or adjust the *Front light* and *Color settings, screen refresh, screen timeout (sleep mode), auto rotation, and customize shortcuts.*

System

To adjust System settings, such as:

- *Language and input* – to set the language of the device and on-screen keyboard.
- *Date and Time* – select whether to set the date and time in 24-hour format, set automatic or manual setting of the date and time, and set the device's time zone to the time in the local time zone when overseas under the Date and Time setting mode.
- *System updates* – check and install new updates of the system.

In this section you can also choose *Developer options* and *Reset options*.

About

Check the basic information of the device such as *system version number, product model, device serial number* etc.

Play Store

Allows you to *enable/disable Google Play Service*.

Firmware Update

WARNING! Firmware Update is an accountable action that will change the device's management software. In the event of improper execution, the program may be damaged and will require treatment in the service centre. Please perform the upgrade procedure in accordance with the instructions below.

To start automatic software update select *Settings > System > System updates* .

The Device will begin to check available update sources in the following order:

- Internal memory;
- Internet.

If a default Internet connection is not set, the Device will ask to connect to one of available wireless networks.

If a new update is available, an update information window will appear. To install the update, click *Get update*. The download and installation of the update will begin. When the download is complete, the device will restart to complete the installation.

Customer Support

For detailed information about service centers in your country please use the contacts below:



Deutschland

0-800-187-30-03

0-800-183-39-70

Česko

800-701-307

France

0805-080-277

Österreich

0-800-802-077

0-800-281-770

Polska

0-800-141-0112

4-822-307-92-56

Switzerland

0-800-898-720

ישראל

1-809-494-246

Україна

0-800-304-800



www.pocketbook.ch



help@pocketbook.ch

Compliance with International Standards

Product name: Color Note

Model number: PB1041

Firmware version: 1.1

Rated input power: 5V/3A, 9V/2A, 12V/1.5A

Manufacturer: Pocketbook International SA. Crocicchio
Cortogna 6, 6900, Lugano, Switzerland. Tel. 0800-187-3003.
Made in China.

EU DECLARATION OF CONFORMITY

	Pocketbook International SA (Crocicchio Cortogna 6, 6900 Lugano, Switzerland) hereby declares that the radio equipment in this product box corresponds to Directive 2014/53/EU. The full text of the EU declaration of conformity for the product in the box is available at the following internet address: https://pocketbook.ch/en-ch/declaration-of-conformity-pocketbook-readers	
---	--	---

RF OUTPUT POWER

WLAN & Bluetooth Output Power (dBm):

This device has been tested and meets the applicable limits for Radio Frequency (RF) exposure.

The frequency and maximum transmitted power in the EU are listed as bellows:

2412 - 2472 MHz: **14.55** (WLAN 2.4G)

5180 - 5240 MHz: **9.62** (WLAN 5.2G)

5745 - 5825 MHz: **8.32** (WLAN 5.8G)

2402 - 2480MHz: **5.19** (BR-EDR), **6.04** (BLE)

WLAN 2.4G Transfer Rate (Mbps):

802.11b: 11 / 5.5 / 2 / 1 Mbps

802.11g: 54 / 48 / 36 / 24 / 18 / 12 / 9 / 6 Mbps

802.11n (20MHz) use 800 ns GI: 65.0 / 58.5 / 52.0 / 39.0 / 26.0 / 19.5 / 13.0 / 6.5 Mbps (MCS0~MCS7)

802.11n (40MHz) use 800 ns GI: 13.5 / 27 / 40.5 / 54 / 81 / 108 / 121.5 / 135 Mbps

WLAN 5.2G Transfer Rate (Mbps):

802.11a: 6 / 9 / 12 / 18 / 24 / 36 / 48 / 54 Mbps;

802.11n (20MHz): up to MCS0-7

802.11n (40MHz): up to MCS0-7

802.11ac (20MHz): up to MCS0-8

802.11ac (40MHz): up to MCS0-9

802.11ac (80MHz): up to MCS0-9


WLAN 5.8G Transfer Rate (Mbps):

802.11a: 6 / 9 / 12 / 18 / 24 / 36 / 48 / 54 Mbps;

802.11n (HT20/ HT40): MCS0 - MCS7;

802.11ac (VHT20/ VHT40/ VHT80): NSS1, MCS0 - MCS9, NSS2

 FCC

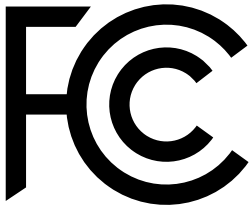

This device (**FCC ID: 2AUVWPB1041**) complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to the user. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. 15.105 Information for the user.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connecting the equipment to a socket on a circuit different from that to which the receiver is connected.
- Contact with the provider or a radio TV technician for help.

SAR

The exposure standards for wireless devices employ a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC/IC is 1.6 W/kg. The SAR limit recommended by the Council of the European Union is 2.0 W/kg. This device's maximum SAR value is well below the

FCC/IC and EU limits with specific measurements shown in the below table.

FCC / IC	Max SAR Value (W/kg)
1.6	1-g Body (Separation distance of 0 mm)
	WLAN 2.4G - 1.454
	WLAN 5.2G - 0.367 WLAN 5.8G - 0.054
EU / ACMA	Max SAR Value (W/kg)
2.0	0.438
	10-g Body (Separation distance of 0 mm)

This device was tested for typical operations of use on the body, with the back of the PB1041 at 0 mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a distance of 0 mm between the user’s body and the back of the PB1041. This version of the user manual is developed for safety certification purposes only and may not represent the final software functionality of the device’s firmware.

IMPORTANT: Changes or modifications to this product not authorized could void the EMC and wireless compliance and negate your authority to operate the product. This product has demonstrated EMC compliance under conditions that included the use of

compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.



**Includes ADOBE®
READER® MOBILE**