



ACT Pre-terminated cables: Dismantle Protective Tubes Manual

ACT connectivity



WARNING: Install the cable
before doing steps in the
manual

STEP 1

Cut the tip of the
protective tube




STEP 2

Cut and remove the
heat shrink tube



STEP 3

Remove the tube

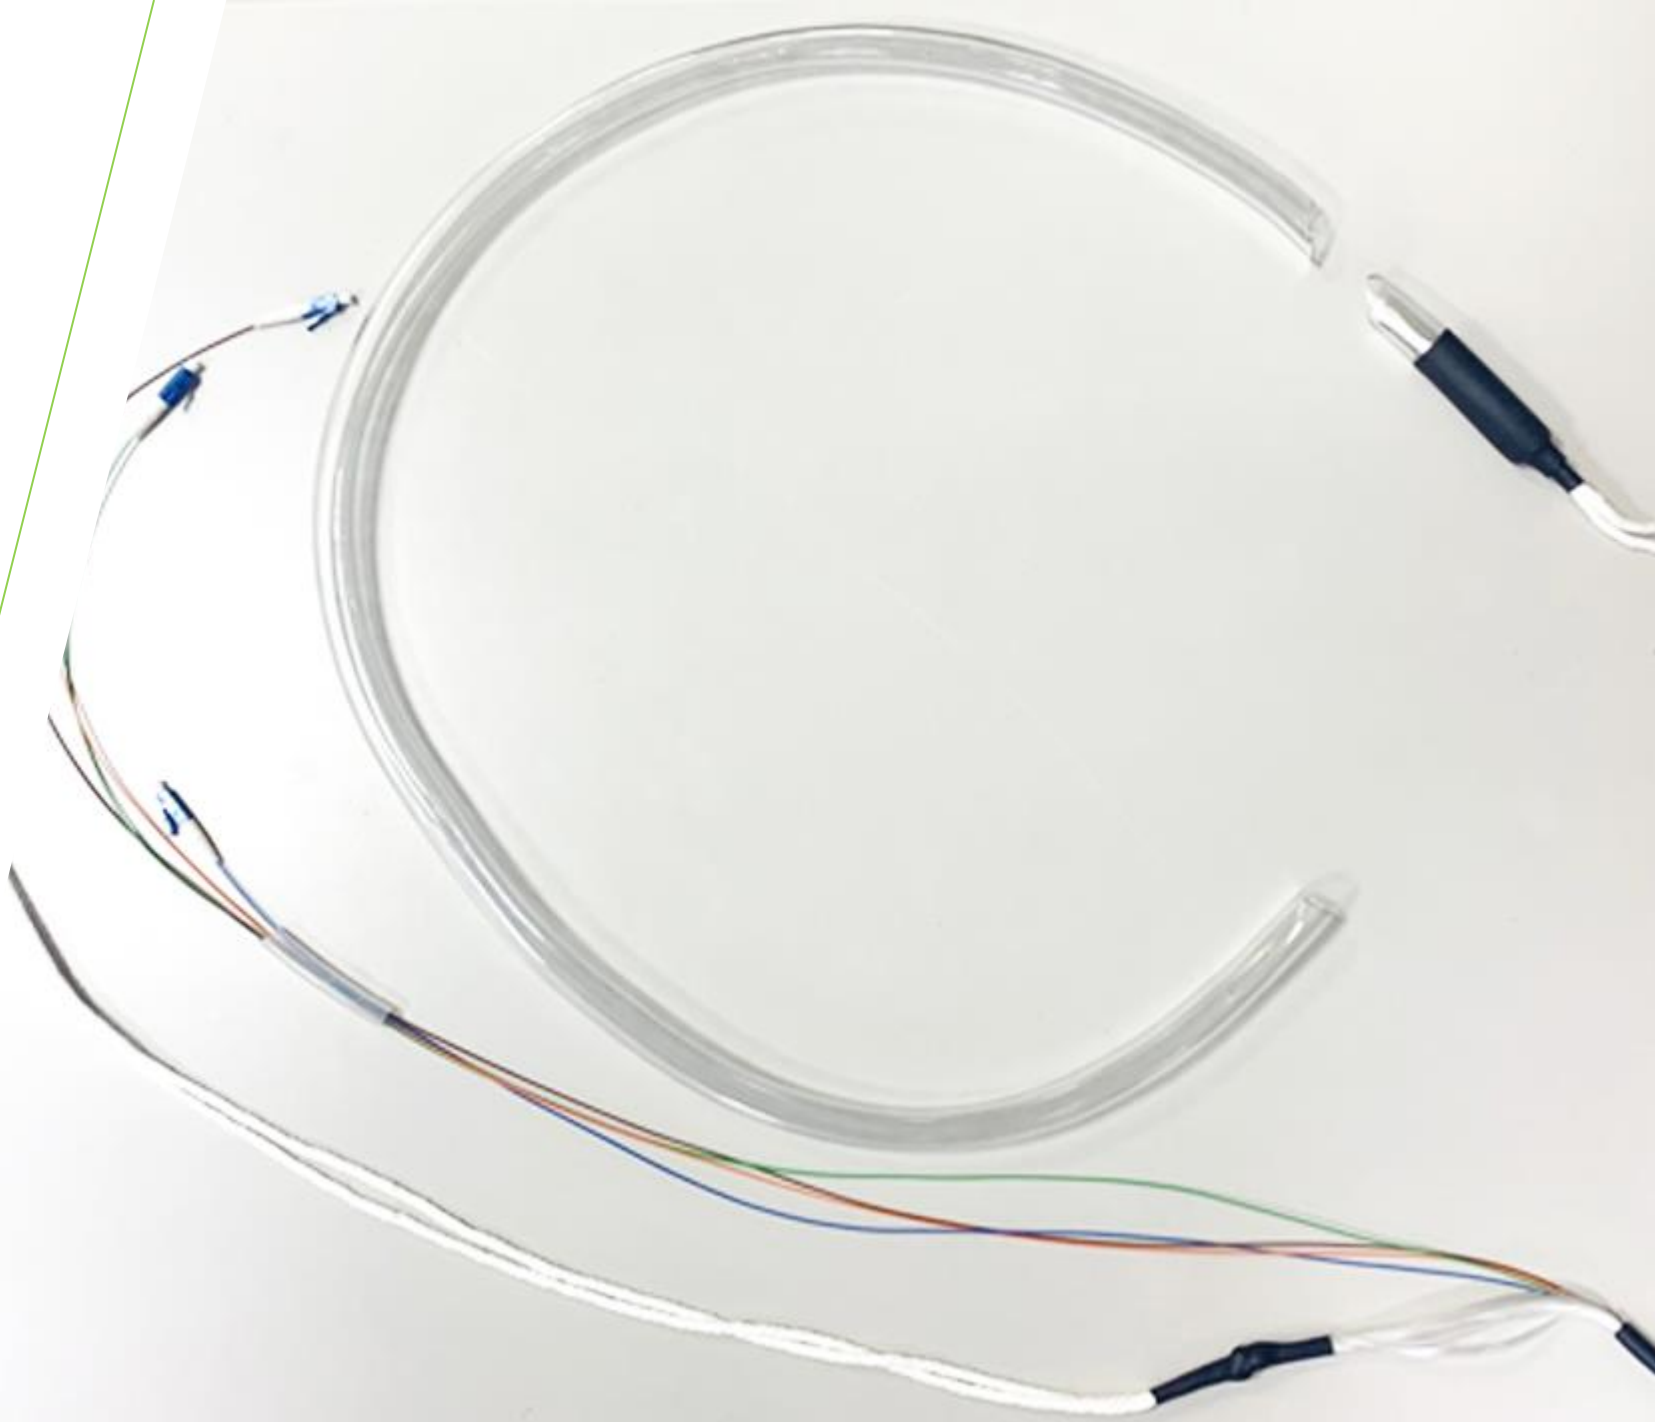

FINISHED

Cut the Kevlar



Do **NOT** cut off the
Fiber Cords

