



WiFi Tellur Smart Devices Manual

Works with **Alexa** or **Google Home**

A simple guide on how to install Tellur Smart Aapp and integrate your smart devices with Alexa or Google Assistant.



INTO YOUR FUTURE

Download and install the **Tellur Smart App** for either iOS or Android devices.



Once downloaded, the app will ask you to register your device. Enter your phone number or email and select the country you live in.

If you register by phone number, you will receive a text message with a registration code. Input the code to finish your registration.

If you register by email, please create a password for your Tellur Smart account.

A screenshot of the "Register" screen in the Tellur Smart app. The screen has a white background with a blue header bar at the top. Below the header, the word "Register" is displayed in a bold, black font. There are two input fields: "Country" and "E-mail Address". Each field has a small blue icon to its right. Below these fields is a large blue button with the text "Next" in white. At the bottom of the screen, there is a small logo and some text.



Adding a New Device

- Turn on the device you want to pair and make sure the light is flashing quickly.
- Open the app, click "+" and choose the device you want to pair.
- Select the WiFi network and enter the password of your WiFi network.
- Once connected, you can rename your device or click "done".



- Once paired with Tellur Smart app, you can remotely control your smart device.

Alexa integration:

1. Go to Home menu on Alexa app.
2. Select "Skills" / "Skills & Games".



3. Type Tellur Smart in the search bar.



4. Select Tellur Smart and click "Enable" to activate Tellur Smart.
5. Enter your Tellur Smart account and password. Now you have finished the integration with Alexa.
6. Tellur Smart app is now skilled with Alexa and you can vocally control the devices added in Tellur Smart. Remember - if you rename your smart devices, use a simple name that Alexa can recognize.
7. To control your smart devices through Alexa, use simple and concise voice commands. Here's an example for bedroom lighting:
"Alexa, turn off bedroom light"
"Alexa, turn on bedroom light"
"Alexa, dim bedroom light"
"Alexa, set bedroom light to red"



Failed to add device?

1. Make sure the device is powered on.
2. Check the WiFi connection of your phone.
3. Check if the device is in pairing mode.
Reset your smart device to enter pairing mode.
Please refer to the "How to reset device" section below.
4. Check router or related:
If you use a dual-band router, select the 2.4GHz network to add the device. You also need to enable the router's broadcasting function. Set encryption method as WPA2-PSK and authorization type as AES, or set both on "auto".
5. Check if the WiFi signal is strong enough.
To maintain the signal strong, keep your router and the smart device as close as possible.
6. Wireless mode should be 802.11.b/g/n
7. Make sure you don't exceed the maximum number of registered devices supported by the app (150).
8. Check if the router's MAC filtering function is enabled. If so, remove the device from the filter list and make sure the router is not prohibiting the device connection.
9. Make sure the WiFi password entered in the app is correct.

EZ and AP connection modes:

Smart devices can be connected using two modes: EZ and AP.

EZ represents the easiest way of connecting and enabling a smart device. You will need to have the device, active wireless network through with login password and Tellur Smart APP installed on a smartphone / tablet.

AP mode can be used to configure and enable a smart device first with the smartphone / tablet and later on to the Wi-Fi network.

How to reset device?

1. Reset procedure for devices with reset button (power strip, aroma diffuser, plugs etc.) -> Long press the reset button for 5 seconds until the LED indicator flashes, indicating successful reset. If the LED indicator flashes quickly (2 times per second), the device has entered EZ pairing mode. If the indicator flashes slowly (one time /3 seconds), the device has entered AP pairing mode. Under EZ mode, press the reset button for 5 seconds until the LED flashes slowly, indicating the AP mode (and vice versa).
2. Reset procedure for lighting devices -> Start by turning off the lights. Switch light following these exact steps: on-off-on-off-on (the time interval between switches should not exceed 10 seconds). When the lights are flashing, the device has been successfully reset. If the light isn't flashing, repeat the steps above. When the lights flash quickly (4 times/second), the device is in EZ mode. If the lights flash slowly (2 times/3 seconds), the device is in AP mode. Under EZ mode, repeat the steps above until the light starts flashing slowly, indicating that the device has entered AP mode (and vice versa).

How to add device under EZ mode?

1. Make sure the LED indicator/light flashes quickly.
2. Make sure the phone is connected to WiFi.
3. Tap "Add device" in Tellur Smart app and enter the WiFi's network password.
4. In the device list, select the device you want to pair and add it.

How to add device under AP mode?

1. Make sure the LED indicator/light flashes slowly.
2. Tap "Add device" in Tellur Smart app and select "AP mode" from the top-right corner. Connect to the device's hotspot first and then proceed to connect it to the WiFi network.
3. Tap "Next" to add device.

Can I control device with 2G/3G/4G network?

When adding the device for the first time, the device and the phone need to be connected to the same WiFi network. Once the device has been successfully paired with Tellur Smart app, you can remotely control it via 2G/3G/4G networks.

How can I share my device with family?

Open Tellur Smart app, go to "Profile" -> "Device sharing" -> "Sharing sent", tap "Add sharing" and share the device with the added family members. Notice - users have to install the Tellur Smart app on their device in order to see shared devices.

How can I manage the devices shared by others?

Open the app, go to "Profile" > "Device sharing" > "Sharing received" where you can see the devices shared with other. Swipe left to delete shared devices.

Quick Guide of Using Google Home to Control Smart Devices

Before using Google Home to control your devices, make sure you meet the following conditions:

You have a Google Home device or an Android device with Google Assistant.

You have the newest version of Google Home app.

You have the newest version of Google app (Android only).

The device display language is set to English US.

You have the Tellur Smart app and a related account.

Add devices in Tellur Smart App (Refer to App Instruction)


You can skip this part if you've already add some devices to your Tellur Smart account, and in the meantime the devices' name are easily recognized.

Link account in Home Control

1. Go to Google Home's homepage and tap "+".



2. Hit the "Add new" button, enter Tellur Smart in the search bar and select the app from the list. Next, select your Tellur Smart account's region, enter your Tellur Smart account and password and tap "Link now". After you assign rooms for devices, your devices will be listed in the Home Control page.

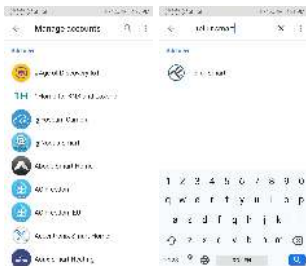

Now you can control your smart devices through Google Home. Take bedroom light as the example, the supported voice commands are as below:

- **Ok Google, turn on/off bedroom light.**
- **Ok Google, set bedroom light to 50 percent.**
- **Ok Google, brighten bedroom light.**
- **Ok Google, dim bedroom light.**
- **Ok Google, set bedroom light to red.**

Declaration of conformity

We, ABN SYSTEMS INTERNATIONAL S.R.L.,
Bucharest, Sector 1, Marinariilor street, nr. 31, we
declare on own responsibility that the product below:

Product description	Brand	Product code
WiFi Smart Bulb E27, 10W, white/warm, dimmer	Tellur	TLL331001
WiFi Smart Bulb E27, 10W, white/warm/RGB, dimmer	Tellur	TLL331011

It does not endanger life, health, work safety, does
not have a negative impact on the environment and
corresponds to the standards stated in the
manufacturer's declaration of conformity.

The product is in compliance with the following
standards and / or other normative documents:

RED - 2014/53/EU

Applied standards:

EN 62479 (Health)

EN 60950-1 (Safety)

EN 301 489-1/-17 (EMC)

EN 300 328 (Radio)

RoHS - 2011/65/EU

The product bears CE mark, applied in 2018

Name: George Barbu
Function: General manager

Place and date:
Bucharest, 02-05-2018
Signed:



Declaration of conformity

We, ABN SYSTEMS INTERNATIONAL S.R.L.,
Bucharest, Sector 1, Marinariilor street, nr. 31, we
declare on own responsibility that the product below:

Product description	Brand	Product code
WiFi AC Plug, USB 1A, 2400W, 10A	Tellur	TLL331021
WiFi Power Strip, 3 Outlets, 4*USB 4A, 2200W, 10A, 1.8m	Tellur	TLL331031
WiFi switch, 1 port, 1800W, 10A	Tellur	TLL331041
WiFi switch, 2 ports, 1800W, 10A	Tellur	TLL331051

It does not endanger life, health, work safety, does
not have a negative impact on the environment and
corresponds to the standards stated in the
manufacturer's declaration of conformity.

The product is in compliance with the following
standards and / or other normative documents:

RED - 2014/53/EU

Applied standards:

EN 60950-1:2006+A2:2013 (Safety)

EN 62311:2008

EN 301 489-1 V2.2.0 (2017-03) (EMC)

EN 301 489-17 V3.2.0 (2017-03)

EN 300 328 V2.1.1 (2016-11) (Radio)

RoHS - 2011/65/EU

The product bears CE mark, applied in 2018

Name: George Barbu

Function: General manager

Place and date:

Bucharest, 02-05-2018

Signed:





Disposal and recycling information

The crossed-out wheeled-bin symbol on your product, battery, literature or packaging reminds you that all electronic products and batteries must be taken to separate waste collection points at the end of their working lives; they must not be disposed of in the normal waste stream with household garbage. It is the responsibility of the user to dispose of the equipment using a designated collection point or service for separate recycling of waste electrical and electronic equipment (WEEE) and batteries according to local laws. Proper collection and recycling of your equipment helps ensure EEE waste is recycled in a manner that conserves valuable materials and protects human health and the environment, improper handling, accidental breakage, damage, and/or improper recycling at the end of its life may be harmful for health and environment.

